## CITROEN BMS Function List (Note:For reference only)

## NOTES:

- This function is supported.
- This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Model	Model Type	BMS
BERLINGO	BERLINGO (B9)	•
BERLINGO	BERLINGO Electric (B9E)	•
C3	C3 (A51)	•
C3	C3 (AIRCROSS) (A88)	•
C3	C3 (B618)	•
C3	C3 (PICASSO) (A58)	•
C4	C4 (2004 - 2010)	•
C4	C4 (B7) (2010 - )	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 - )	•
C4	C4 (SEDAN) (2006 - )	•
C5	C5 (3rd Generation)	•
C5	C5 (AIRCROSS)	•
C5	C5 (X7) (2007 - )	•
C6	C6	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 - )	•
SPACETOURER		•

CITRONE BMS Function List (Note:For reference only)

Manual Configuration