

CITROEN ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

* This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Model | Model Type | ETC |
|------------|-------------------------------|-----|
| BERLINGO | BERLINGO (1) (1996 - 2002) | ● |
| BERLINGO | BERLINGO (2) (2002 - 2008) | ● |
| BERLINGO | BERLINGO (B9) | ● |
| C-ELYSEE | C-ELYSEE | ● |
| C-ELYSEE | C-ELYSEE (R3) | ● |
| C-QUATRE | C-QUATRE (4) | ● |
| C-QUATRE | C-QUATRE (5) | ● |
| C-TRIOMPHE | | ● |
| C2 | C2 (CAN) (2006 -) | ● |
| C2 | C2 (CHINA) | ● |
| C2 | C2 (VAN) (2003 - 2006) | ● |
| C3 | C3 (2002 - 2006) | ● |
| C3 | C3 (A51) | ● |
| C3 | C3 (Ai51) | ● |
| C3 | C3 (AIRCROSS) (Ai58) | ● |
| C3 | C3 (PICASSO) (A58) | ● |
| C3 | C3 (PICASSO) (Ai58) | ● |
| C3 | C3 (PLURIEL) (2002 - 2009) | ● |
| C3 | C3 (R) (2006 - 2009) | ● |
| C3 | C3 (XR) | ● |
| C4 | C4 (2004 - 2010) | ● |
| C4 | C4 (B7) (2010 -) | ● |
| C4 | C4 (BZ3) (CHINA) | ● |
| C4 | C4 (L) (B7) | ● |
| C4 | C4 (PICASSO) (2006 - 2013) | ● |
| C4 | C4 (PICASSO) (B78) (2013 -) | ● |
| C4 | C4 (SEDAN) (2006 -) | ● |
| C5 | C5 (2001 - 2004) | ● |
| C5 | C5 (R) (2004 - 2007) | ● |
| C5 | C5 (X7) (2007 -) | ● |
| C6 | C6 | ● |
| C8 | C8 (CAN) (2005 -) | ● |
| C8 | C8 (VAN) (2002 - 2005) | ● |
| XSARA | XSARA (2) (2000 - 2006) | ● |
| XSARA | XSARA (PICASSO) (1999 - 2002) | ● |
| XSARA | XSARA (PICASSO) (2002 - 2006) | ● |
| XSARA | XSARA (PICASSO) (CHINA) | ● |

CITRONE ETC Function List (Note:For reference only)

Initialisation Of The EGR Throttle

Initialising The Autoadaptives

Motorised Throttle Unit

Replacement Of Exhaust Gas Recycling Electric Throttle

Throttle Learning