| | CITROEN INJ Function List (Note:For reference only) | |
|--|--|---------|
| NOTES: | | |
| This function is supported by the support of the supp | ported. | |
| | e supported, which depends on the actual condition of the ve | ehicle. |
| • This function is not | | |
| ▲ This function is the | new feature in this version. | |
| Mode1 | Model Type | INJ |
| BERLINGO | BERLINGO (2) (M69) | • |
| BERLINGO | BERLINGO (B9) | • |
| C-ELYSEE | C-ELYSEE | • |
| C-QUATRE | C-QUATRE (4) | • |
| C-QUATRE | C-QUATRE (5) | • |
| C3 | C3 (A51) | • |
| C3 | C3 (Ai51) | • |
| C3 | C3 (AIRCROSS) (A88) | • |
| C3 | C3 (AIRCROSS) (Ai58) | • |
| C3 | C3 (B618) | • |
| C3 C3 C3 C3 C3 C3 C3 C3 C3 C3 C3 | C3 (PICASSO) (A58) | • |
| C3 | C3 (PICASSO) (Ai58) | • |
| C3 | C3 (XR) | • |
| C4 | C4 (2004 - 2010) | • |
| C4 | C4 (B7) (2010 -) | • |
| C4 C4 | C4 (BZ3) (CHINA) | • |
| C4 | C4 (CACTUS) | • |
| C4 | C4 (L) (B7) | • |
| C4 | C4 (PICASSO) (2006 - 2013) | • |
| C4 | C4 (PICASSO) (B78) (2013 -) | • |
| C4 C4 C4 C5 | C4 (SEDAN) (2006 -) | • |
| C5 | C5 (3rd Generation) | • |
| C5 | C5 (AIRCROSS) | • |
| C5 | C5 (X7) (2007 -) | |
| C6 | C6 | • |
| C6 | C6 (CHINA) | • |
| C8 | C8 (CAN) (2005 -) | • |
| JUMPER/RELAY | JUMPER/RELAY (3) (2006 - 2011) | • |
| JUMPER/RELAY | JUMPER/RELAY (3) (Euro 5 / 6) (2011 -) | |
| JUMPER/RELAY | JUMPER/RELAY (3) (MiniBus) (2006 -) | |
| JUMPY/DISPATCH | JUMPY/DISPATCH (3) (2007 - 2016) | • |
| JUMPY/DISPATCH | JUMPY/DISPATCH (K0) (2016 -) | |
| SPACETOURER | | |
| | CITRONE INJ Function List (Note:For reference only) | |
| Classification Of In | njector | |
| | e Characterisation Of Diesel Injector | |
| Diesel Injectors Pre | | |
| Initialisation Of D | | |
| Injector Replacement | | |
| Injectors | | |
| | llowing Replacement Of The Urea Injector | |
| Replacement Of Inje | | |
| Replacement Of One Or More Petrol Injectors | | |
| Replacement Of One Or Several Injectors | | |
| Replacement Of The Cyliner Head Or Programming Of The Injectors | | |
| | -, | |