

Jaguar OTHER Fuction List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

VehicleType	ModelYear	Engine	OTHER
XE	2016	GTDI 2.0L	●
XE	2016	Diese I4 2.0L	●
XE	2016	Supercharged V6 3.0L	●
XE	2017	GTDI 2.0L	●
XE	2017	Diese I4 2.0L	●
XE	2017	Supercharged V6 3.0L	●
XE	2018-	V8 5.0L Petrol	●
XE	2018-	GTDI 2.0L Petrol	●
XE	2018-	V6 3.0L Diesel	●
XE	2018-	AJ200D 2.0L Diesel	●
XE	2018-	V6 3.0L Petrol	●
XE	2018-	AJ200D 2.0L Petrol	●
XF	2008-2009	Normally aspirated V6	●
XF	2008-2009	Normally aspirated V8	●
XF	2008-2009	Diese V6	●
XF	2008-2009	Supercharged V8	●
XF	2010-2011	Normally aspirated V6	●
XF	2010-2011	Diese V6	●
XF	2010-2011	Normally aspirated V8 5.0L	●
XF	2010-2011	Supercharged V8 5.0L	●
XF	2010-2011	Normally aspirated V8 4.2L	●
XF	2012	Normally aspirated V6	●
XF	2012	Diese V6	●
XF	2012	Normally aspirated V8 5.0L	●
XF	2012	Supercharged V8 5.0L	●
XF	2012	Diese I4 2.2L	●
XF	2013-2015	Diese V6	●
XF	2013-2015	Supercharged V8 5.0L	●
XF	2013-2015	Diese I4 2.2L	●
XF	2013-2015	GTDI 2.0L	●
XF	2013-2015	Supercharged V6	●
XF	2016-2017	Diese V6	●
XF	2016-2017	GTDI 2.0L	●
XF	2016-2017	Diese I4 2.0L	●
XF	2016-2017	Supercharged V6 3.0L	●
XF	2018-	V8 5.0L Petrol	●
XF	2018-	GTDI 2.0L	●
XF	2018-	V6 3.0L Diesel	●
XF	2018-	AJ200D 2.0L Diesel	●
XF	2018-	V6 3.0L Petrol	●
XF	2018-	AJ200P 2.0L Petrol	●
XJ	2006-2007	Normally aspirated V6	●
XJ	2006-2007	Diese V6	●
XJ	2006-2007	Supercharged V8	●

XJ	2006-2007	Normally aspirated V8 3.5L	●
XJ	2006-2007	Normally aspirated V8 4.2L	●
XJ	2008-2009	Normally aspirated V6	●
XJ	2008-2009	Diese V6	●
XJ	2008-2009	Supercharged V8	●
XJ	2008-2009	Normally aspirated V8 3.5L	●
XJ	2008-2009	Normally aspirated V8 4.2L	●
XJ	2010-2012	Diese V6	●
XJ	2010-2012	Normally aspirated V8 5.0L	●
XJ	2010-2012	Supercharged V8 5.0L	●
XJ	2010-2012	Normally aspirated V6 3.0L	●
XJ	2013-2015	Diese V6	●
XJ	2013-2015	Normally aspirated V8 5.0L	●
XJ	2013-2015	Supercharged V8 5.0L	●
XJ	2013-2015	GTDI 2.0L	●
XJ	2013-2015	Supercharged V6	●
XJ	2016-	Diese V6	●
XJ	2016-	Supercharged V8 5.0L	●
XJ	2016-	GTDI 2.0L	●
XJ	2016-	Supercharged V6	●
XK	2006-2009	Supercharged V8	●
XK	2006-2009	Normally aspirated V8 3.5L	●
XK	2006-2009	Normally aspirated V8 4.2L	●
XK	2010-2015	Normally aspirated V8	●
XK	2010-2015	Supercharged V8	●
F_Type	2014-2015	Supercharged V8 5.0L	●
F_Type	2014-2015	Supercharged V6 3.0L	●
F_Type	2016-2017	Supercharged V8 5.0L	●
F_Type	2016-2017	Supercharged V6 3.0L	●
F_Type	2018-	V8 5.0L Petrol	●
F_Type	2018-	V6 3.0L Petrol	●
F_Type	2018-	AJ200P 2.0L Petrol	●
S_Type	2006-2008	Normally aspirated V8	●
S_Type	2006-2008	Diese V6	●
S_Type	2006-2008	Supercharged V8	●
S_Type	2006-2008	Normally aspirated V6 3.0L	●
S_Type	2006-2008	Normally aspirated V6 2.5L	●
E-Pace	2018	204PT 2.0L Petrol	●
E-Pace	2018	204PT 2.0L Diese	●
E-Pace	2018	204DT 2.0L Diese	●
E-Pace	2018	1.5L Petrol	●
E-Pace	2018	AJ200P 2.0L Petrol	●
F_Pace	2017	Diese V6	●
F_Pace	2017	GTDI 2.0L	●
F_Pace	2017	Diesel I4 2.0L	●
F_Pace	2017	Supercharged V6 3.0L	●
F_Pace	2018	V8 5.0L Petrol	●
F_Pace	2018	GTDI 2.0L Petrol	●
F_Pace	2018	V6 3.0L Diesel	●
F_Pace	2018	AJ200D 2.0L Diesel	●
F_Pace	2018	V6 3.0L Petrol	●
F_Pace	2018	AJ200P 2.0L Petrol	●

I_Pace	2019-	NONE	●
OTHER Function List			
Active Damping Control Module - Build Mode			
Active Damping Control Module - Calibration Learn			
Adaptive Speed Control - Speed Control Alignment			
Adaptive Speed Control - Speed Control Internal State			
Add/remove Accessories - Mirror Personalisation Features			
Add/remove Accessories - Passenger Restraint Disable Switch			
Add/remove Accessories - Tire Size (Rolling Circumference)			
All Wheel Drive - All Wheel Drive - Calibration			
All Wheel Drive - All Wheel Drive - System Flush			
All Wheel Drive - All Wheel Drive System - Pump Bleed			
All Wheel Drive - All Wheel Drive System - Pump Venting			
All Wheel Drive - All Wheel Drive System - Transfer Case Control Module Reset - Clear			
Audio System - Calibrate Dynamic Volume Control			
Auxiliary Heater - Auxiliary Heater Activation Test			
Auxiliary Heater - Auxiliary Heater Configuration Check			
Auxiliary Heater - Auxiliary Heater Fuel Delivery Test			
Body Systems - Crash Status Reset			
Powertrain - Engine Control Module Vin Learn Application			
Body Systems - Ignition Cycle Counter Reset			
Body Systems - Lock Steering Tune To Vehicle			
Safety Belt Pretensioner System - Clear Module Learn Data B			
Body Systems - Pedestrian Impact Crash Status Reset			
Safety Belt Pretensioner System - Driver's Side - Dynamic Safety Belt Retract And			
Body Systems - Rain Sensor Calibration			
Body Systems - Rain Sensor Initialisation			
Safety Belt Pretensioner System - Passenger's Side - Dynamic Safety Belt Retract And			
Body Systems - Valet Mode Reset			
Car Configuration Management - Fuel Tank Volume			
Car Configuration Management - Speed Limitation			
Car Configuration Management - Tire Circumference			
Clear Module Learn Data A			
Deploy Deployable Towbar			
Deployable Towbar Recovery			
Deployable Towbar Speaker Test			
Safety Belt Pretensioner System - Dynamic Safety Belt Retract And Release			
Security - Keyfob Remote Functionality			
Security - Third Button Configuration			
Entertainment System - Dvd Region Counter Reset			
Entertainment System - Front Control Display Interface Module - Graphics Update			
Entertainment System - InControl Touch Pro Customer Pin Reset			
Entertainment System - Navigation Reset			
Special Applications - Transportation Mode			
Head Up Display - Activate Test Picture			
Head Up Display - Head Up Display Control Module Reset			
Auxiliary Heater - Auxiliary Heater Priming Routine			
Heating And Ventilation - Vent Actuators Test			
Image Processing Module Camera's - Camera Auto Learn Routine			
Image Processing Module Camera's - Camera Register Update			
Instrument Cluster Control Module - Fuel Consumption Units			

Instrument Cluster Control Module - Message Centre Display Contrast
Lighting - Automatic High Beam Camera Calibration
Rear Differential Control Module - Control Module Calibration
Running Board Control Module - Service Mode Disabled
Running Board Control Module - Service Mode Enabled
Lighting - Power Module - Reset
Powertrain - Paddle Shift Configuration
Side Object Detection - Side Object Detection Configuration(Left)
Side Object Detection - Side Object Detection Configuration(Right)
Special Applications - Dc To Dc Electric Power Inverter Converter Module Mode
Special Applications - Hybrid Electric Vehicle Operation Mode
Special Applications - Parking Aid Control Module Reset
Special Applications - Parking Aid Control Module Reset Configuration State
Special Applications - Parking Aid Switch-Enable(Disable)
Special Applications - Pre-delivery Inspection
Special Applications - Restraints Build Mode
Stow Deployable Towbar
Unlock Deployable Towbar
All Wheel Drive - All Wheel Drive - High Oil Temperature Reset
Telematics Control Module - Emergency Call And Breakdown Call Switch Illumination Test
Telematics Control Module - Network Registration Status
Telematics Control Module - Pre-activate Telematics Control Module
Telematics Control Module - Reset/clear Wifi Hotspot
Telematics Control Module - Telematics Operational Mode
Telematics Control Module - Telematics Server Communication Check
Telematics Control Module - Telematics Sim Card Type