

Jaguar SPS Fuction List(Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

VehicleType	ModelYear	Engine	SPS
XE	2016	GTDI 2.0L	●
XE	2016	Diese I4 2.0L	●
XE	2016	Supercharged V6 3.0L	●
XE	2017	GTDI 2.0L	●
XE	2017	Diese I4 2.0L	●
XE	2017	Supercharged V6 3.0L	●
XE	2018-	V8 5.0L Petrol	●
XE	2018-	GTDI 2.0L Petrol	●
XE	2018-	V6 3.0L Diesel	●
XE	2018-	AJ200D 2.0L Diesel	●
XE	2018-	V6 3.0L Petrol	●
XE	2018-	AJ200D 2.0L Petrol	●
XF	2013-2015	Diese V6	●
XF	2013-2015	Supercharged V8 5.0L	●
XF	2013-2015	Diese I4 2.2L	●
XF	2013-2015	GTDI 2.0L	●
XF	2013-2015	Supercharged V6	●
XF	2016-2017	Diese V6	●
XF	2016-2017	GTDI 2.0L	●
XF	2016-2017	Diese I4 2.0L	●
XF	2016-2017	Supercharged V6 3.0L	●
XF	2018-	V8 5.0L Petrol	●
XF	2018-	GTDI 2.0L	●
XF	2018-	V6 3.0L Diesel	●
XF	2018-	AJ200D 2.0L Diesel	●
XF	2018-	V6 3.0L Petrol	●
XF	2018-	AJ200P 2.0L Petrol	●
XJ	2010-2012	Diese V6	●
XJ	2010-2012	Normally aspirated V8 5.0L	●
XJ	2010-2012	Supercharged V8 5.0L	●
XJ	2010-2012	Normally aspirated V6 3.0L	●
XJ	2013-2015	Diese V6	●
XJ	2013-2015	Normally aspirated V8 5.0L	●
XJ	2013-2015	Supercharged V8 5.0L	●
XJ	2013-2015	GTDI 2.0L	●
XJ	2013-2015	Supercharged V6	●
XJ	2016-	Diese V6	●
XJ	2016-	Supercharged V8 5.0L	●
XJ	2016-	GTDI 2.0L	●
XJ	2016-	Supercharged V6	●
F Type	2014-2015	Supercharged V8 5.0L	●
F Type	2014-2015	Supercharged V6 3.0L	●
E-Pace	2018	204PT 2.0L Petrol	●
E-Pace	2018	204PT 2.0L Diese	●

E-Pace	2018	204DT 2.0L Diese	●
E-Pace	2018	1.5L Petrol	●
E-Pace	2018	AJ200P 2.0L Petrol	●
F_Pace	2017	Dieese V6	●
F_Pace	2017	GTDI 2.0L	●
F_Pace	2017	Diesel I4 2.0L	●
F_Pace	2017	Supercharged V6 3.0L	●
F_Pace	2018	V8 5.0L Petrol	●
F_Pace	2018	GTDI 2.0L Petrol	●
F_Pace	2018	V6 3.0L Diesel	●
F_Pace	2018	AJ200D 2.0L Diesel	●
F_Pace	2018	V6 3.0L Petrol	●
F_Pace	2018	AJ200P 2.0L Petrol	●
I Pace	2019-	NONE	●

SPS Function List

Ride Level Control Module Diagnostic Interface
Ride Level Control Module Inflation (Showroom)
Air Suspension Deflation
Air Suspension Inflation
Air Suspension Enable
Set/un-set Air Suspension Geometry Set-up
Set/un-set Air Suspension Manufacturing/freeze Mode
Set/un-set Air Suspension Tight Tolerance Mode (Headlamp Setting)
Suspension Tight Tolerance Control
Height Calibration