

BENZ ECM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Chassis	Model Year	ECM
CLA (117)	ALL	●
SL (129)	Up to 08/99	●
SL (129)	As Of 09/99	●
S (140)	ALL	●
GLA (156)	ALL	●
ML (163)	ALL	●
M (164)	ALL	●
GL (164)	ALL	●
ML (166)	ALL	●
GL (166)	ALL	●
A (168)	ALL	●
A (169)	Up To 11/2005	●
A (169)	As Of 12/2005	●
SLK (170)	16-PIN	●
SLK (170)	38-PIN	●
SLK (171)	Up To 05/2005	●
SLK (171)	As Of 06/2005	●
SLK (172)	ALL	●
A (176)	ALL	●
AMG (190)	ALL	●
SLS (197)	ALL	●
SLR (199)	ALL	●
C (202)	Up to 05/97	●
C (202)	As Of 06/97	●
CLC (203)	Up To 08/2003	●
CLC (203)	As Of 09/2003	●
CLC (203)	As Of 01/2008	●
C (204)	ALL	●
GLK (204)	ALL	●
C (205)	ALL	●
E (207)	ALL	●
CLK (208)	ALL	●
CLK (209)	Up To 03/2004	●
CLK (209)	As Of 04/2004	●
E (210)	Up to 02/97	●
E (210)	As Of 03/97	●
E (211)	Up To 05/2005	●
E (211)	From 06/2005 To 05/2006	●
E (211)	As Of 06/2006	●
E (212)	ALL	●
CL (215)	Up To 08/2002	●
CL (215)	As Of 09/2002	●
CL (216)	ALL	●
S (217)	ALL	●
CLS (218)	ALL	●
CLS (219)	Up To 05/2005	●
CLS (219)	From 06/2005 To 05/2006	●

CLS(219)	As Of 06/2006	●
S(220)	Up To 08/2002	●
S(220)	As Of 09/2002	●
S(221)	Up To 06/2009	●
S(221)	As Of 07/2009	●
S(222)	ALL	●
SL(230)	Up To 08/2003	●
SL(230)	From 09/2003 To 02/2008	●
SL(230)	AS Of 03/2008	●
SL(231)	ALL	●
Maybach(240)	Up To 08/2006	●
Maybach(240)	As Of 09/2006	●
B(242)	ALL	●
B(245)	Up To 11/2005	●
B(245)	As Of 12/2005	●
B(246)	ALL	●
R(251)	ALL	●
GLC(253)	ALL	●
G(461)	As Of 03/2007(16-PIN)	●
G(463)	Up To 03/2004(16-PIN)	●
G(463)	From 04/2004 To 08/2006(16-PIN)	●
G(463)	From 09/2006 To 02/2007(16-PIN)	●
G(463)	From 03/2007 To 12/2011(16-PIN)	●
G(463)	From 01/2012 To 12/2017(16-PIN)	●
G(463)	38-PIN	●

ECM Function List

Boot strapping
Correction programming of electric fan for combustion engine or air conditioning
Correction programming of fuel quantity
Correction programming of ignition
Fuel Quantity
Ignition
Perform correction programming(Fuel quantity)
Perform correction programming(Ignition)
Quick teach-in of the zero quantity calibration values at idle
Reset Quantity Mean Value Adaptation Data
Reset lambda adaptation
Reset of lambda values
Reset quantity mean value adaptation data
Resetting of adaptation values
Resetting of mixture adaptation
Resetting of sensor adaptation
Status of teach-in process
Teach-in of exhaust gas recirculation actuator
Teach-in of position for camshafts