

MINI OTHER Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Series	Development code	Sales designation	OTHER
MINI	F54	Cooper	●
MINI	F54	Cooper ALL4	●
MINI	F54	Cooper D	●
MINI	F54	Cooper S	●
MINI	F54	Cooper S ALL4	●
MINI	F54	Cooper SD	●
MINI	F54	Cooper SD ALL4	●
MINI	F54	John Cooper Works ALL4	●
MINI	F54	One	●
MINI	F54	One D	●
MINI	F55	Cooper	●
MINI	F55	Cooper D	●
MINI	F55	Cooper S	●
MINI	F55	Cooper SD	●
MINI	F55	One	●
MINI	F55	One D	●
MINI	F56	Cooper	●
MINI	F56	Cooper D	●
MINI	F56	Cooper S	●
MINI	F56	Cooper SD	●
MINI	F56	John Cooper Works	●
MINI	F56	One	●
MINI	F56	One D	●
MINI	F57	Cooper	●
MINI	F57	Cooper D	●
MINI	F57	Cooper S	●
MINI	F57	Cooper SD	●
MINI	F57	John Cooper Works	●
MINI	F57	One	●
MINI	F57	One D	●
MINI	F60	Cooper	●
MINI	F60	Cooper ALL4	●
MINI	F60	Cooper D	●
MINI	F60	Cooper D ALL4	●
MINI	F60	Cooper S	●
MINI	F60	Cooper S ALL4	●
MINI	F60	Cooper SD	●
MINI	F60	Cooper SD ALL4	●
MINI	F60	John Cooper Works ALL4	●
MINI	F60	One	●
MINI	F60	One D	●
MINI	R50	Cooper	●
MINI	R50	One	●
MINI	R50	One D	●
MINI	R52	Cooper	●
MINI	R52	Cooper S	●

MINI	R52	One	●
MINI	R53	Cooper S	●
MINI	R53	John Cooper Works	●
MINI	R55	Cooper	●
MINI	R55	Cooper D	●
MINI	R55	Cooper S	●
MINI	R55	Cooper SD	●
MINI	R55	John Cooper Works	●
MINI	R55	One	●
MINI	R55	One D	●
MINI	R56	Cooper	●
MINI	R56	Cooper D	●
MINI	R56	Cooper S	●
MINI	R56	Cooper SD	●
MINI	R56	John Cooper Works	●
MINI	R56	MINI E	●
MINI	R56	One	●
MINI	R56	One D	●
MINI	R57	Cooper	●
MINI	R57	Cooper D	●
MINI	R57	Cooper S	●
MINI	R57	Cooper SD	●
MINI	R57	John Cooper Works	●
MINI	R57	One	●
MINI	R58	Cooper	●
MINI	R58	Cooper S	●
MINI	R58	Cooper SD	●
MINI	R58	John Cooper Works	●
MINI	R59	Cooper	●
MINI	R59	Cooper S	●
MINI	R59	Cooper SD	●
MINI	R59	John Cooper Works	●
MINI	R60	Cooper	●
MINI	R60	Cooper ALL4	●
MINI	R60	Cooper D	●
MINI	R60	Cooper D ALL4	●
MINI	R60	Cooper S	●
MINI	R60	Cooper S ALL4	●
MINI	R60	Cooper SD	●
MINI	R60	Cooper SD ALL4	●
MINI	R60	John Cooper Works	●
MINI	R60	One	●
MINI	R60	One D	●
MINI	R61	Cooper	●
MINI	R61	Cooper ALL4	●
MINI	R61	Cooper D	●
MINI	R61	Cooper D ALL4	●
MINI	R61	Cooper S	●
MINI	R61	Cooper S ALL4	●
MINI	R61	Cooper SD	●
MINI	R61	Cooper SD ALL4	●
MINI	R61	John Cooper Works	●
OTHER Function List			

ACC sensor: Function test of heater
ACC sensor: Start-up
ACC: Adjust short-range sensors
ACSM: Read coding data
Activate SDARS
Activation/deactivation terminal 15
Activation/deactivation, terminal 15
Adaptation of exhaust gas pressure sensor before exhaust turbocharger
Adaptation of screen dimensions of the reversing camera on the MASK
Adaptations and equipment specifications
Add production date
Adjust ACC sensor
Adjusting the installation position of exhaust gas restriction flap
Adjusting the wastegate linkage
All-round vision camera teach-in
Bleed headlight cleaning system
CAS: Reset
CTM: Rear module emergency access
Calibration of body general module
Calibration run for flap motors
Check Control messages
Compare equipment specification
Coolant compressor infeed protection
Correct M-ASK tuner
DWA activation
DWA: Check by false alarm (with CA)
DWA: Microwave sensors
DWA: Read or delete alarm memory
DWA: triggering
EGR adaptation
EHC safety shut-off
EHC: - Lifting and lowering function check
EHC: - Warning lamp, pre-drive check (10s)
EHC: Delete energy saving mode
EHC: Ride height sensors
EHC: Warning lamp, pre-drive check (30s)
EWS key status
EWS write key variant
Electronic immobiliser (EWS): Reset starter lock
Electronic ride height control (EHC): - Ride height sensor check
Electronic ride height control (EHC): Check ride height sensors
Electronic ride height control (EHC): Check, compressor relay
Electronic ride height control (EHC): Ride height sensors
Electronic ride height control (EHC): Vehicle level
Enable airbag activation after programming operation
Exhaust-gas recirculation
Exhaust-gas recirculation cooler adaptation
Floating headlining installation position
Glow element adjustment
HCP: Teach in tilt sensor
HSR functional check
HSR start-up
HSR wheel alignment
Head unit reset

Initialisation of the component protection in the head unit
Initialise ACC sensor
Initialise power window drive
Initialise rain/driving lights sensor.
Initialise slide/tilt sunroof
Initialise slide/tilt sunroof.
Initialising the CID cover
Initialising the radiator emblem
Instrument cluster: Control unit self-test
Integration level
Interior light autoaddressing
KAFAS: Calibration
KAFAS: Reset calibration
Navigation system: DVD lock
Newly address the air distribution flap motors
Open tailgate
Operational parameter of evaporator temperature
Radiator emblem installation position
Rain sensor initialisation
Read MRS coding data
Read out LCM operating data
Read the Check Control history memory
Remote door lock activations
Remote door unlock activations
Reset EWS
Reset EWS function
Reset fault lockout
Reset running-in check
Reset the internal ELV fault counter
Reset: SCR switch-off scenario
Ride height sensor check
Run-in protection for A/C compressor
SCR catalytic converter: register replacement
SCR control unit: Reset assembly mode
SCR reset
Seat standardisation, driver's seat
Set installation position of the EGR valve
Setting, LRR sensor for ACC
Shock absorber adjustment
Solenoid valve check
TLC: Calibrate vibration motor
Teach Touch Command snap-in adapter
Teach in front light electronic turn signal
Teach-in the exhaust flap or move it into the installation position
Tuner, New Zealand
VDM: Vertical acceleration sensor adjustment
Wastegate valve controller: Teach-in end stops/adjust wastegate linkage
Wiper: Installation position
initialise CID cover
initialise radiator emblem