

RollsRoyce BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Series	Development code	Sales designation	BMS
Rolls-Royce	RR1	Phantom	●
Rolls-Royce	RR1	Phantom Extended Wheelbase	●
Rolls-Royce	RR11	ALL	●
Rolls-Royce	RR12	ALL	●
Rolls-Royce	RR2	ALL	●
Rolls-Royce	RR3	ALL	●
Rolls-Royce	RR31	ALL	●
Rolls-Royce	RR4	GHOST	●
Rolls-Royce	RR4	Ghost Extended Wheelbase	●
Rolls-Royce	RR5	ALL	●
Rolls-Royce	RR6	ALL	●

BMS Function List

Auxiliary battery (24 V EPS): Register battery exchange

Auxiliary battery and cut-out relay

Auxiliary battery: Register battery replacement

Charging battery

Composition of the high-voltage battery unit: Read out serial numbers

High-voltage battery unit: Drain coolant expansion tank

High-voltage battery unit: Read out stored series numbers

High-voltage battery unit: Release of the coolant pump after programming

High-voltage battery: Evaluating the battery state of charge

Load starter battery and system battery.

Register battery exchange

Register battery replacement

Reset ZBM / SEC workshop mode

Starting up the high-voltage battery unit