

RollsRoyce BSC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Series	Development code	Sales designation	BSC
Rolls-Royce	RR1	Phantom	●
Rolls-Royce	RR1	Phantom Extended Wheelbase	●
Rolls-Royce	RR11	ALL	●
Rolls-Royce	RR12	ALL	●
Rolls-Royce	RR2	ALL	●
Rolls-Royce	RR3	ALL	●
Rolls-Royce	RR31	ALL	●
Rolls-Royce	RR4	GHOST	●
Rolls-Royce	RR4	Ghost Extended Wheelbase	●
Rolls-Royce	RR5	ALL	●
Rolls-Royce	RR6	ALL	●

BSC Function List

ARS: Pressure sensor, front axle

ARS: Pressure sensor, rear axle

Adjustment of the driving dynamics sensors

Bleeding DSC hydraulics

Connection, rpm sensor

DSC control unit adjustment

DSC sensor adjustment

DSC unit adjustment

DSC: Adjustment of the driving dynamics sensors

DSC: Pressure sensor

DSC: Sensor adjustment

DSC: Start-up of DSC unit

DSC: pressure sensor adjustment

End-of-belt test, brake control not performed

ICM sensor system: Start-up

ICM:Coding

Pressure sensors

Read vehicle identification number (ABS/ASC)

SBA: Initial operation

Start-up for brake pedal travel sensor