

RollsRoyce ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Series	Development code	Sales designation	ETC
Rolls-Royce	RR1	Phantom	●
Rolls-Royce	RR1	Phantom Extended Wheelbase	●
Rolls-Royce	RR11	ALL	●
Rolls-Royce	RR12	ALL	●
Rolls-Royce	RR2	ALL	●
Rolls-Royce	RR3	ALL	●
Rolls-Royce	RR31	ALL	●
Rolls-Royce	RR4	GHOST	●
Rolls-Royce	RR4	Ghost Extended Wheelbase	●
Rolls-Royce	RR5	ALL	●
Rolls-Royce	RR6	ALL	●

ETC Function List

Adaptation, hot film air mass meter

Adjusting the electromotive throttle controller

DME: Delete adaptation variable camshaft timing control

Learn Valvetronic limit positions

Learning Valvetronic limit positions

Mass meter

Open global VTC limit position adaptation

Remove Valvetronic servomotor

Reset engine adaptation values/delete variants

VANOS adaptation

Valvetronic adaptation limit positions

Valvetronic: Initial operation

Valvetronic: Start-up