

RollsRoyce TCM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Series	Development code	Sales designation	TCM
Rolls-Royce	RR1	Phantom	●
Rolls-Royce	RR1	Phantom Extended Wheelbase	●
Rolls-Royce	RR11	ALL	●
Rolls-Royce	RR12	ALL	●
Rolls-Royce	RR2	ALL	●
Rolls-Royce	RR3	ALL	●
Rolls-Royce	RR31	ALL	●
Rolls-Royce	RR4	GHOST	●
Rolls-Royce	RR4	Ghost Extended Wheelbase	●
Rolls-Royce	RR5	ALL	●
Rolls-Royce	RR6	ALL	●

TCM Function List

Coasting: System check

EGS: Learn parking

EGS: Mechatronic calibration

EGS: Reset adaptation values

EGS: transmission fluid adjustment

EME: Check 2-speed manual gearbox wear

EME: Read out the adjustment value of the rotor position sensor

EME: Reset vacuum pump operating time

Gearshift speed control

LDM: Pump motor calibration

LDM: Ventilation

MSA: Deactivate installation mode

MSA: Starter exchange

Oil change

Oil-level adjustment

Reset learning functions

Reset service function of learning functions

Service function, display and reset adaptation values

Transfer box (VTG): Calibration

Transfer box (VTG): Oil change

Transfer box (VTG): Replace control unit

Transfer box: Oil change

Transmission control unit: Display and reset adaptation values

Transmission control unit: Oil balancing

Transmission control unit: Oil change

Transmission control unit: Oil-level adjustment

Transmission control unit: Reset adaptation values

Transmission control unit: Reset learning function

Transmission control unit: Resetting adaption functions

Transmission control unit: Standstill adaption

Transmission control unit: Testing the integrated electrical pump

Transmission oil pump activation

Twin-clutch gearbox: , parking lock hook test

Twin-clutch gearbox: Functional check, parking lock